


# Mounting Instructions for iMount Books and Urbane Albums

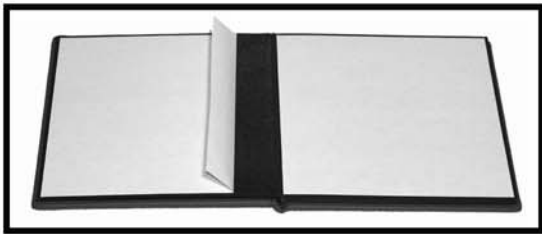

Step 3




Step 4




Step 5



Step 6

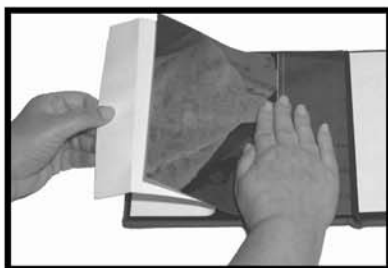

Step 7

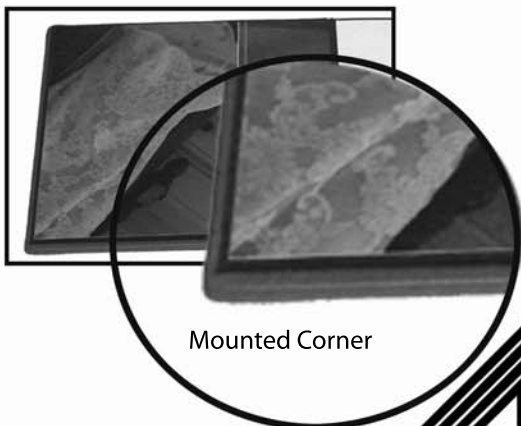

Mounted Corner

1. Measure your print against the mounting area to get a visual for the size and place placement. Prints can vary in size and may require a small amount of trimming. The mounting area is 1/8" smaller than the print dimensions.

2. Check your print to make sure the reverse side is clean. Either dust with a tack cloth or use canned air.

3. Peel back the release paper from the inside seam. Fold back about 1" and make a firm crease in the release paper.

4. Align print to the outside edges – the release paper will form a "tent" that keeps the print from touching the exposed adhesive. Make sure print is centered exactly as you want it to be positioned.

5. When you are satisfied with the print placement, place one hand firmly on the print. Use your other hand to collapse the tent and press the print to the adhesive.


6. Seal the print to the adhesive from the center to the edges.

7. Reach under the print with one hand and slowly pull the release paper away from the center of the book while using your other hand to gently press the print to the adhesive moving across the print until the release paper is clear and the print is down. Gently smooth the print surface from the center out with a soft cloth. A roller is not necessary.

8. For large prints, we suggest folding the creased release paper back down and confirming the print alignment all the way around. Then hold the print firmly in place with one hand, lift the inside edge of the print, fold the release paper back and continue from 5 above.

9. For iMount Matted and Urbane, follow the same steps while centering the image within the mat opening.

Inserting cover image

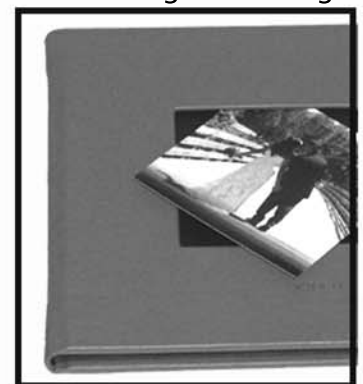

[www.artleather.com](http://www.artleather.com)

**ART LEATHER**  
THE WORLD'S FINEST ALBUMS AND FOLIOS